

AURA CONCRETE TABLE

INSTALLATION INSTRUCTIONS

SKU: TBL-AURA-RND-C

Thank you for choosing Trueform Concrete.

AURA is a minimalist concrete table designed to provide unobstructed leg room.



This table was shipped in separate pieces in order to prevent damage from transit. Light assembly is therefore required. Caution: These pieces are heavy, so assembly will require at least two people.

For the best results, **please read these instructions in their entirety** to understand the complete process before you begin.

Hardware Provided

8 stainless steel panhead screws, 3/4" long



Items Required

- Power drill
- Phillips-Head bit
- Phillips-Head screwdriver
- Level
- Measuring Tape

AURA CONCRETE TABLE

INSTALLATION INSTRUCTIONS

SKU: TBL-AURA-RND-C

Setting & Leveling the Base

1. Place the concrete base in its intended location. The bottom of the base has adjustable feet to accommodate for uneven flooring. Adjust each of the feet by turning them either clockwise or counter-clockwise, checking with a level until the base is level both vertically and horizontally.

Placing the Top


2. The underside (subdeck) of the top has been predrilled to accept screws. One location will be marked with a colored circle that corresponds to a similar mark on one of the 4 brackets. This is done to ensure the top is orientated properly and the holes align with the brackets. Identify these marks on both the top and base.
3. Place the top on the base so that location of the two colored dots align while centering it as well as you can by eye. Once the top is on, make small adjustments until the holes and brackets align by measuring the overhang on all sides using values in the charts to the right. The 60" table has an 18" overhang while the 48" & 54" tables have a 15" overhang. Ensure the top is centered over the base.
4. Using a power drill with a Phillips-Head bit, drive screws through the holes in each of the 4 mounting brackets and into the wooden subdeck. You may wish to tighten with a Phillips-head screwdriver to avoid stripping the hole.

For Custom Sizes


If you have purchased a custom-sized AURA, simply follow the directions above while using the overhang dimensions provided in your technical drawing.

That's it! We hope you enjoy your AURA Table. If you have any questions or need assistance, feel free to reach us at 888-474-7977 or at info@trueformconcrete.com.

AURA 60"

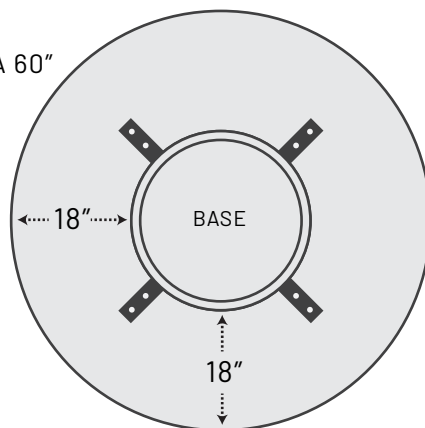

AURA 54"

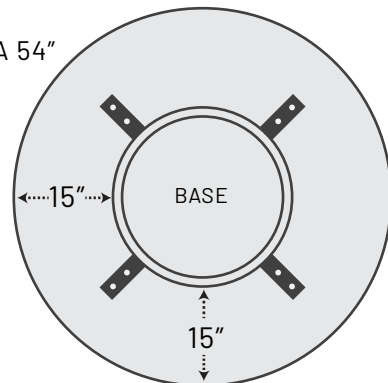

AURA 48"

